


TruckSkin 877-866-SKIN
www.truckskin.com

1 Slide your new DoorSkin out of it's box, all hardware and battens are preinstalled on it at our factory.

2 Check the aluminum hardware, slide the top rail off your DoorSkin and cut it to fit between the door cables at the top of the door. Then slide it back on to the DoorSkin.

3 Using a ladder, install the top hardware piece with the DoorSkin hanging from it. Install it right underneath the drip cap (aluminum cap). Mount the top DoorSkin rail with 4 supplied screws. If DoorSkin is measured correctly, the skin should hang down & stop just above bottom panel with door handle on it.

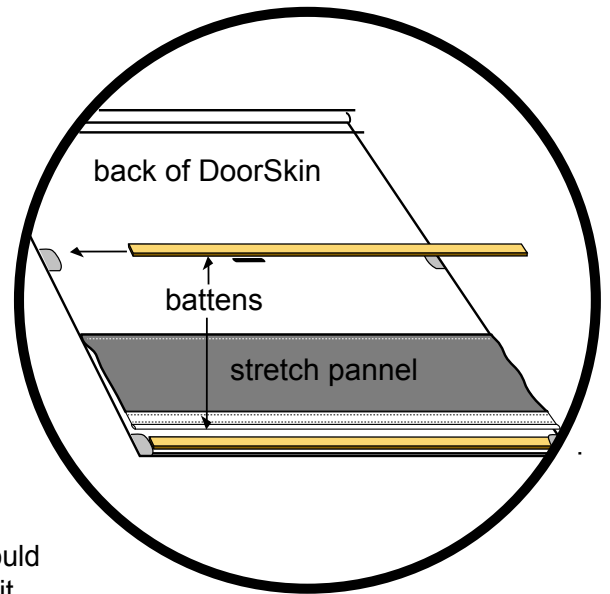

4 Flip the skin up and slip it under the door cables.

5 Hanging behind the DoorSkin is our unique stretch panel with the Kedar material attached and the bottom with the DoorSkin hardware on it. Making sure that you have checked the length of it, and verified the style of door (some doors have cables that are spaced out from the door at the lower attachment points, this style the hardware can extend behind the cables.). If the door is the type that the cables are clamped tightly to the door, then make sure that you cut off the DoorSkin hardware to fit between the door cables.



6 Give the lower hardware approximately 1" of stretch downward and attach it using the included fasteners.

7 Flip the DoorSkin back down under the door cables and operate the door to make sure it works smoothly.



**Still have questions? Call us anytime
877-866-7546 or email sales@truckskin.com**

**TruckSkin.com
2807 Cass Road B1, Traverse City, MI 49684**